

It's So Easy to Save Time · Save Money

Cut Hair at Home with the

Sunbeam

CLIPMASTER®

HAIR CLIPPER



®Registered trade mark

BY *Sunbeam* THE BEST ELECTRIC APPLIANCES MADE

**YOU NOW OWN
THE FINEST
HAIR CLIPPER
MADE**

Sunbeam

**CLIPMASTER
HAIR CLIPPER**

Congratulations! You made a wise investment. You own a product that will save \$1.00-\$2.00 *every time* it is used. You also will save time by eliminating the waiting involved in trips to the barber shop. Using the finest hair clipper made, you will find it *easy* to cut hair at home.

Your Sunbeam Clipmaster Hair Clipper is light weight and perfectly balanced. The "On-Off" switch is conveniently located at your thumb-tip. The Sunbeam-built motor is more powerful, runs cooler, lasts longer—permits you to do a better job. Follow the easy-to-understand instructions, and your Sunbeam Clipmaster Hair Clipper will serve you well and save you money for years to come.

guarantee

Upon receipt of the Guarantee Registration Card packed with this product, your Sunbeam Model C Clipmaster Hair Clipper is guaranteed for one year against electrical and mechanical defects in material and workmanship. Any such defects will be repaired, or parts replaced, free-of-charge during this period. The guarantee does not cover damage caused by misuse, negligent handling, or use on current and voltage other than that stamped on the product. This guarantee is in lieu of any other warranty, either expressed or implied. See page 16, for service instructions.

about the guides

Using Sunbeam hair cutting Guides, anyone can give haircuts with professional results. The Guides are included in the Sunbeam Clipmaster Hair Clipper Kit, and are available at all Sunbeam Service Stations. If you have the Guides, follow the instructions on this side of the folder. *To give haircuts using the Hair Clipper without the guides, continue to page 5; then, follow the instructions beginning on page 10.*

your "customers"

Your new Sunbeam Clipmaster Hair Clipper will cut boy's, men's, girl's or women's hair with equally fine results. You can give "butch" or "crew" haircuts, or regular haircuts, with the same ease and confidence. You will obtain professional results on men's haircuts, as well as in giving those in-between-haircut trims that save men time and money. You will like the results when you trim bangs and bobs of young ladies in your family. Women also use the Sunbeam Clipmaster Hair Clipper to trim the popular short hair styles, and to shave the neck in-between hair styling.

the general hints

1. Clip a little at a time; never more than $\frac{1}{8}$ ". It always is easy to go back and clip more.
2. Concentrate on one entire step at a time. Avoid short-cuts. Refer to these instructions until you are familiar with them.
3. Work slowly and easily at first. Speed will come from practice.
4. Comb the hair into place frequently during the haircut. This keeps your work balanced.

first

chart your course




Before you start, do as the barber does — give yourself every opportunity to work easily and confidently under the best possible conditions. Select a well lighted area. Seat your “customer”. The top of his head should be at your eye level. Prop him up, if necessary. Put the cape, or a towel, around his neck—comb his hair into place.

Standing behind your boy, compare his hair line with that of the boy in the illustration above. This boy needs a haircut, too. The hair that a professional barber would cut when giving this boy a haircut is shown in detail in this illustration. The illustration gives you the natural contour of the hairline before and after cutting, regardless of what style of hair you are cutting.

clip

back of neck

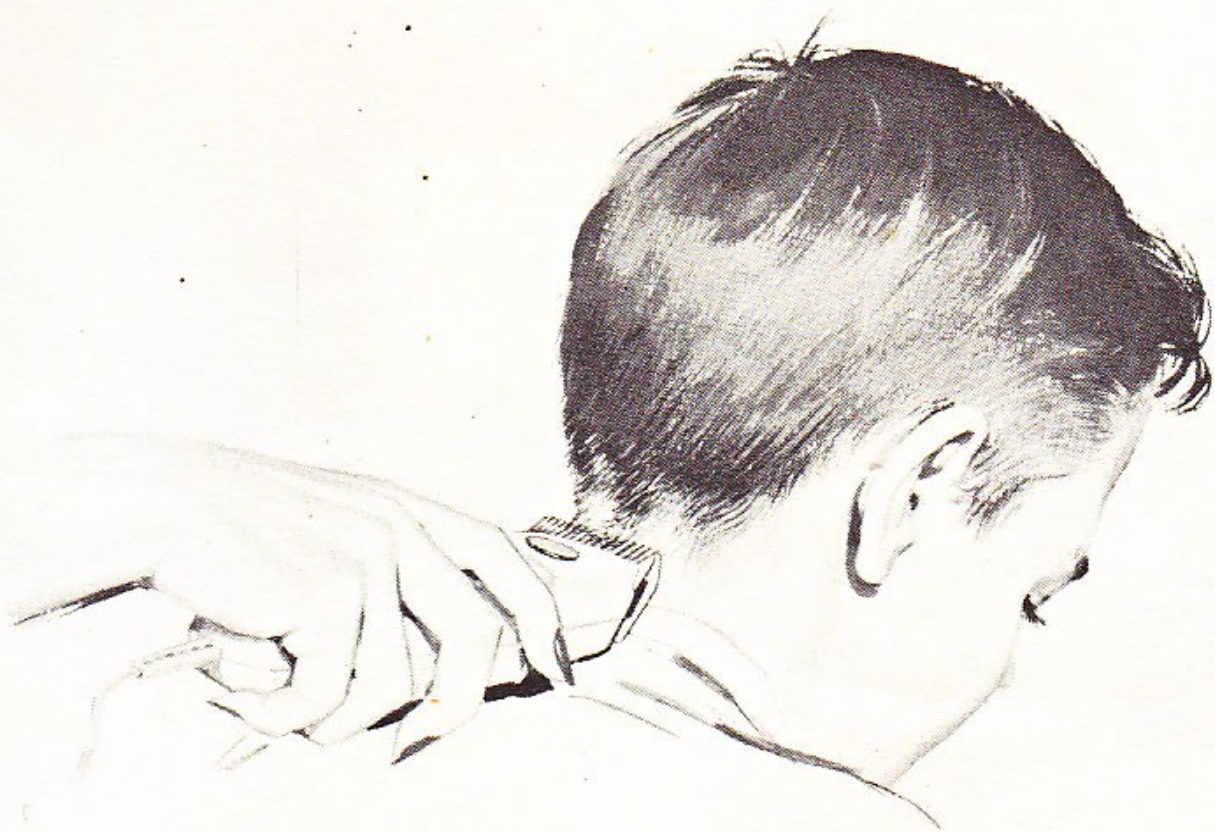


Use the clipper only. Start at the center of the neck, as far down as the hair grows. Place the clipper teeth against the skin. Clip with a gradual upward stroke, tilting the clipper back slowly.

Clip *all the way around the neck*. Don't cut up in one swath. The hair you remove in this step is shown in detail in the illustration above. Notice that you are actually establishing a line curving down slightly from each earlobe.


All of the hair below this line is removed in this first step. Work slowly and easily, removing only a little hair at a time.

taper

the neck

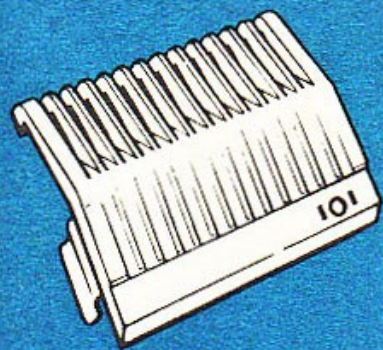

LIGHT TAPERING GUIDE
NO. 101

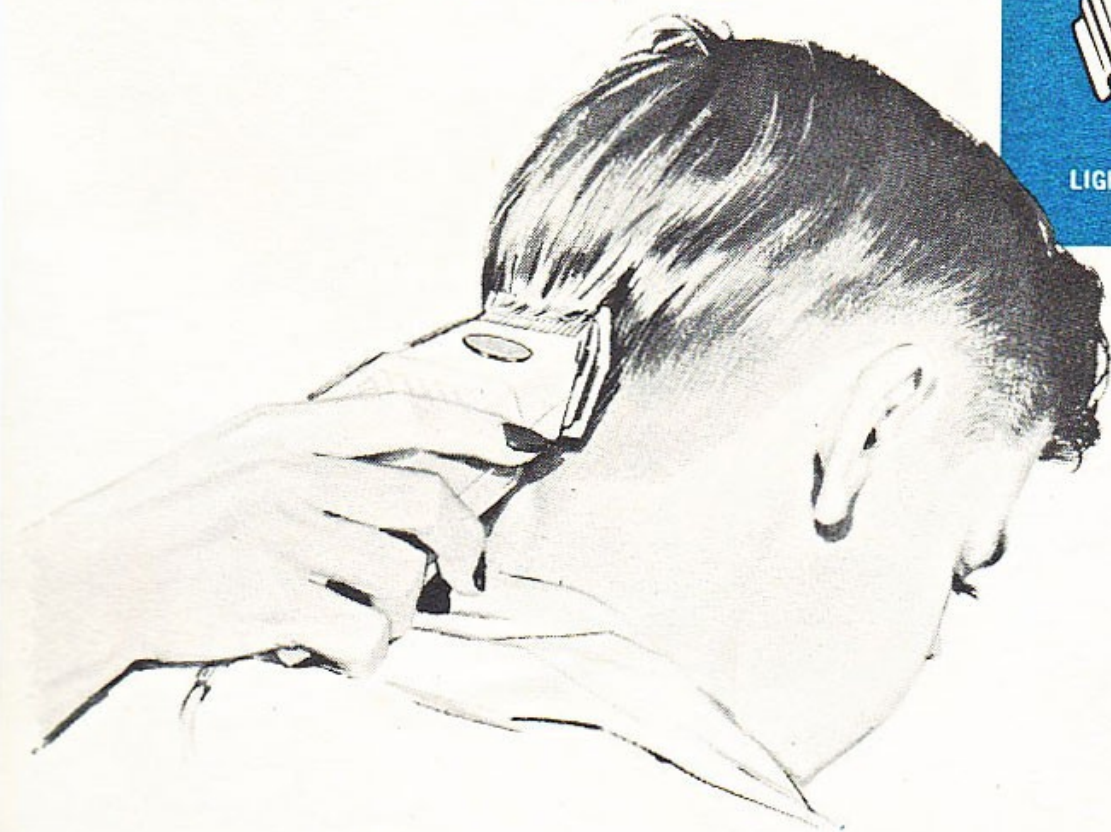

Attach Light Tapering Guide (101). Hook the clip on Guide 101 under one side of the clipper's guide blade. Press down firmly to attach other side of clip to guide blade. Slide the Guide all the way forward, until the clipper teeth touch the "V" notch in the Guide.

Start at the hairline in the center of the back of the neck. Direct the clipper upward with an easy gliding motion, using short strokes. Tilt the clipper teeth farther away from the hair as you work up into the longer hair. Slowly and carefully follow the natural contour of the hairline. Go back and smooth rough or uneven areas. Next, trim the sideburns, using gradual upward strokes of the clipper with Guide attached.

trim the longer hair




Use the comb and barber's-type shears to cut the longer hair at the front and on the sides and top of the head. Comb the hair forward over the eyes. Stand behind the head. Lift a small section of front hair with your comb. Using the comb as a guide, clip about $\frac{1}{8}$ " of hair with the shears. Work the shears by moving your thumb only. Cut with the front part of the shears using quick, short strokes. Keep one blade of the shears against the comb at all times.

As you work back to the rear of the head, gradually cut the hair shorter by moving the comb closer to the head. Use this method to trim the longer hair on the sides and at the top of the "taper area" at the back of the head. Comb frequently during this step, and trim any uneven spots as they appear.

to give

"butch" or "crew" haircuts

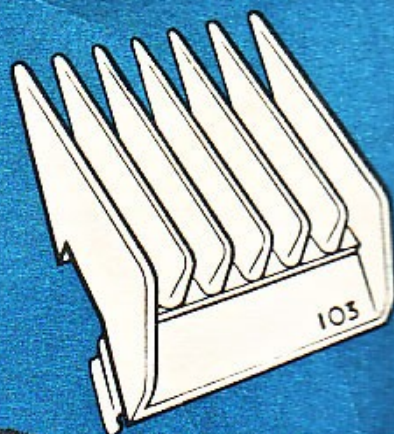

BUTCH OR CREW CUT
GUIDE NO. 103

First, clip the back of the neck and taper, as described on pages 5 and 6. Snap Guide 103 in place.

Refer to the illustrations above for the contour of the hair in the "Butch" haircut. Start at the front and work back to the crown of the head. Clip the entire top of the head. Always clip against the direction in which the hair grows. Next, work up the sides of the head. Finally, work up the back of the neck to the crown. Repeat, if necessary, until the hair is the same length all over the head.

In the "Crew" haircut, the front is longer and the top is flat, rather than rounded, as in the "Butch". Use the comb and Hair Clipper with Guide 103 attached to give this haircut. Start at the front and work back, using the comb to regulate the length of hair desired. Guide 103 will cut hair about $\frac{1}{2}$ inch long. If longer hair is desired, use the comb to regulate the length of the hair and clip over it, using clipper with guide.

taper the neck



Analyze the hair to determine the “taper area”—the detailed area in the illustration above.

Comb the hair into place. Hold the comb with the teeth up. Start at the bottom of the taper area. Using the big teeth, comb the hair up “against the grain”. Turn the teeth of the comb out away from the scalp as you go up.

Clip $\frac{1}{8}$ to $\frac{1}{4}$ of an inch of hair as it comes through the teeth of the comb. Finish the bottom all the way around the neck. As you work up, the hair is longer. *Never* clip more than $\frac{1}{4}$ to $\frac{1}{8}$ of an inch of hair. Control the length of hair by turning the comb out farther away from the head.

Comb the hair into place frequently. Remove any unevenness or ragged spots by running the clipper over the comb.

trim

the longer hair



Comb the hair. Start with the longer hair on the side of the head, behind the right ear. Lift the hair with the comb using it with the teeth facing up as shown. Clip $\frac{1}{8}$ to $\frac{1}{4}$ of an inch of hair with the Hair Clipper, as it comes through the teeth of the comb.

Control the length of hair by turning the comb out farther away from the head. Follow this procedure for all the longer hair on the sides and on the top of the taper area, at the back of the head.

trim

hair on top



Comb the hair forward over the eyes. From behind, lift a small section of front hair with your comb. As shown above, grasp the hair so that about $\frac{1}{2}$ " extends through your fingers. Use your fingers as a guide, and cut the hair with the hair clipper.

Work back to the crown of the head, gradually cutting the hair shorter. Move your fingers closer to the head to cut more hair as you work back.

blend

the hairline



First, trim the sideburns. Run the comb up through the hair, turn it out, and clip desired length of hair extending through comb with hair clipper.

Blending is done with the clipper head area directly back of the clipper comb. Tilt the clipper far enough back to avoid cutting hair up above the hairline. Begin at the center of the back of the neck. With short strokes, just barely touch the edge of the hairline with your clipper.

Slowly and carefully follow the hairline up the side of the neck and behind the ears to the sideburns. Then, work back along the hairline to the center of the back of the neck. Repeat for the other side. Finally, comb the hair and check the evenness of the haircut on both sides.

home haircutting for

to trim short hair

Refer to the illustration. Comb hair in usual style. Standing back of girl, grasp hair so that amount to be cut extends beyond first and second fingers. Clip with Hair Clipper, using fingers as guide.



to taper back of head

Part hair across back of head into three layers. Using hair pins, fasten the two top layers to hold them out of the way. Starting behind the ear, cut the entire bottom layer from one end to the other. Use the comb to lift up small sections of the hair, and clip off the desired amount with hair clipper. Comb hair down over bottom layer. Determine how much shorter you wish to cut top layer to get desired taper. Pick up sections of hair with comb, and, grasping hair between fingers, clip off a little at a time.

to taper over ears

Comb and part hair into three layers. Follow the method outlined above to taper back of head. Cut only a little hair at a time.

the ladies in your family

to straighten bangs

Your Sunbeam Clipmaster Hair Clipper will cut bangs perfectly straight. Using the hair clipper eliminates the possibility of trimming bangs jagged or uneven. Simply run a comb through the bangs. Clip off the hair that protrudes through the comb at the desired length.



to trim bobbed hair

It is easy to trim bobbed hair styles perfectly straight with the Hair Clipper. By using your Hair Clipper with a comb as a guide, you can quickly shorten any overlong strands of hair and even the bob line.

to trim the neck

Use the hair clipper to shave the neck, if short, cropped hair is worn. Refer to page 5 for procedure.


care and cleaning

Be certain the comb and cutter of your Clipmaster Hair Clipper are oiled before each use. Apply Sunbeam Oil (No. 62-19700) only, and follow the instructions printed on the tube.

The comb and cutter should be kept clean at all times. A gummy, sticky surface on the comb and cutter causes streaks and rough spots in the hair you are cutting. To clean, submerge the comb and cutter in a saucer filled with kerosene, mixed with a few drops of Sunbeam Oil. Run the Clipmaster Hair Clipper for a minute to a minute and one-half with the

comb and cutter *only* immersed in the solution. Remove the comb and cutter, dry thoroughly, replace, and oil before using the Hair Clipper again.

The comb and cutter of the Hair Clipper will need sharpening from time to time, depending upon the extent to which you use the Hair Clipper. For sharpening or any other service required, send or take your Sunbeam Clipmaster Hair Clipper to the nearest Sunbeam Appliance Service Company Branch shown on the enclosed list, or ship it direct to the factory with a letter explaining the nature of the defect.

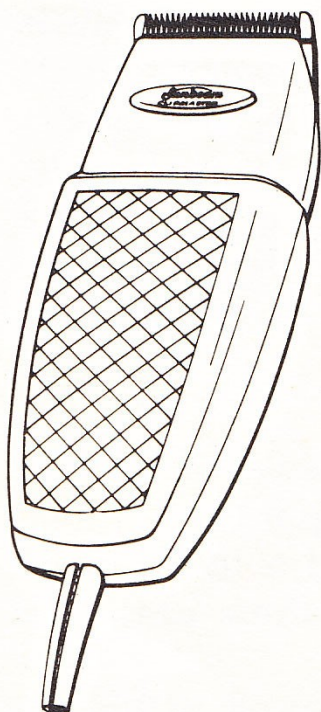

Sunbeam CORPORATION (CANADA) LIMITED

220 Islington Avenue South,
Toronto 18, Ontario

Copyright 1958, Sunbeam Corporation International Copyright 1958, All Rights Reserved